



StorTrends® 3202j Overview

FRONT and DRIVE Order

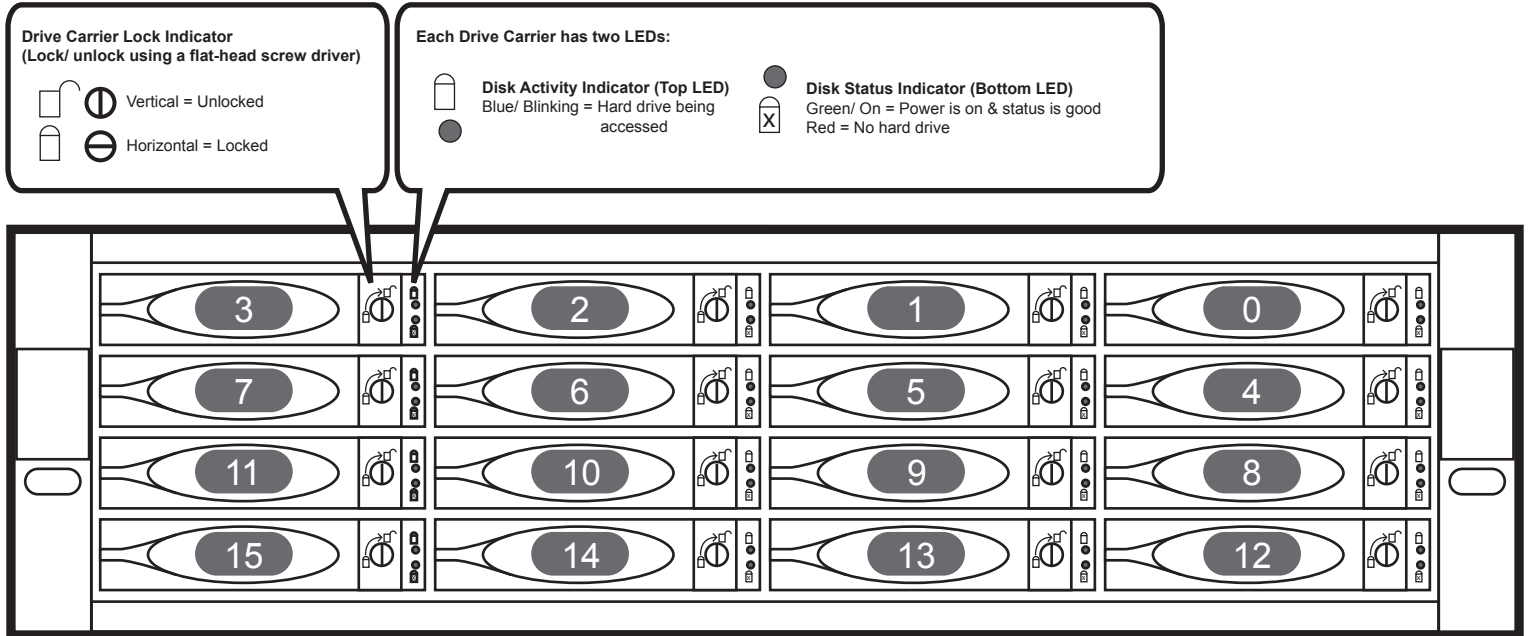

BACK

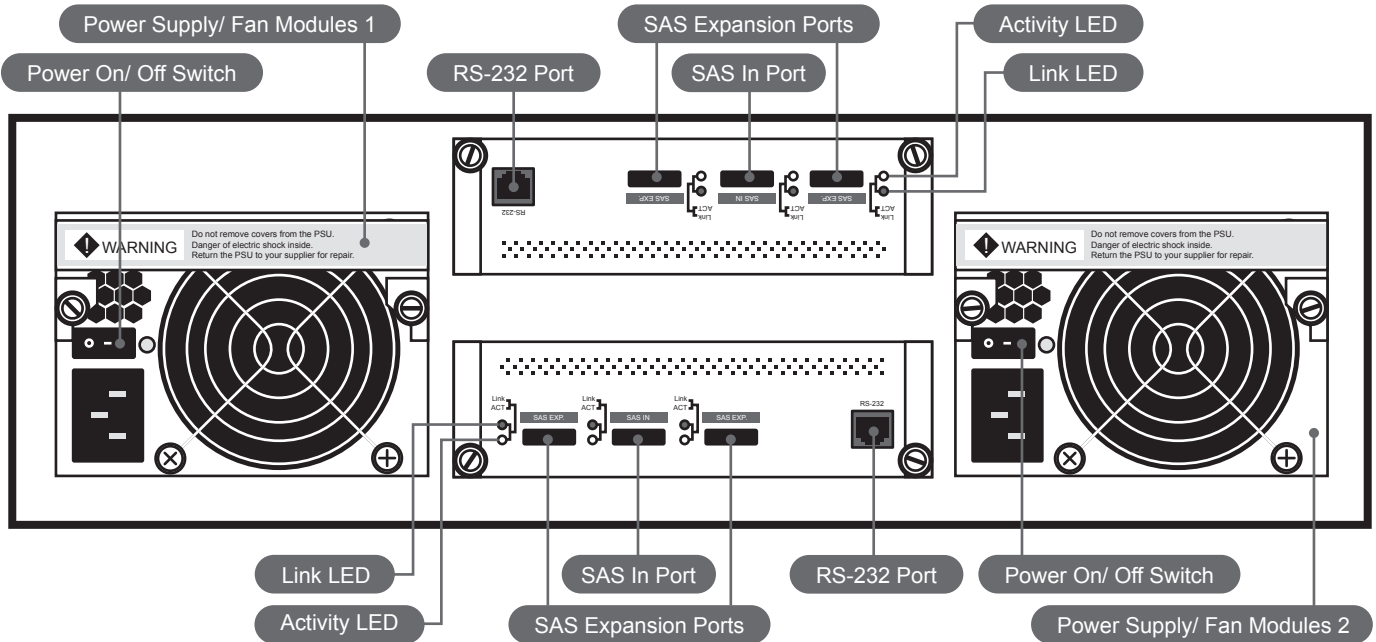


WARNING

SAS hot plugging is supported while SAS hot un-plugging is not. Because of this, the following rules apply:

- During initial setup, connect all cables between new JBOD(s) and the head enclosure prior to powering the new JBOD(s) on.
- Anytime after initial setup, when bringing down the entire storage setup to a powered off state, power down the head enclosure first. Then, power down the JBOD enclosures.
- Anytime after initial setup, when bringing the entire storage configuration back online from a powered off state, power up the JBOD enclosures first and make sure that the cables are properly connected prior to powering up the head enclosure.

StorTrends® 3202j Overview

How to Connect StorTrends 3202j JBODs to the StorTrends 3400i Head

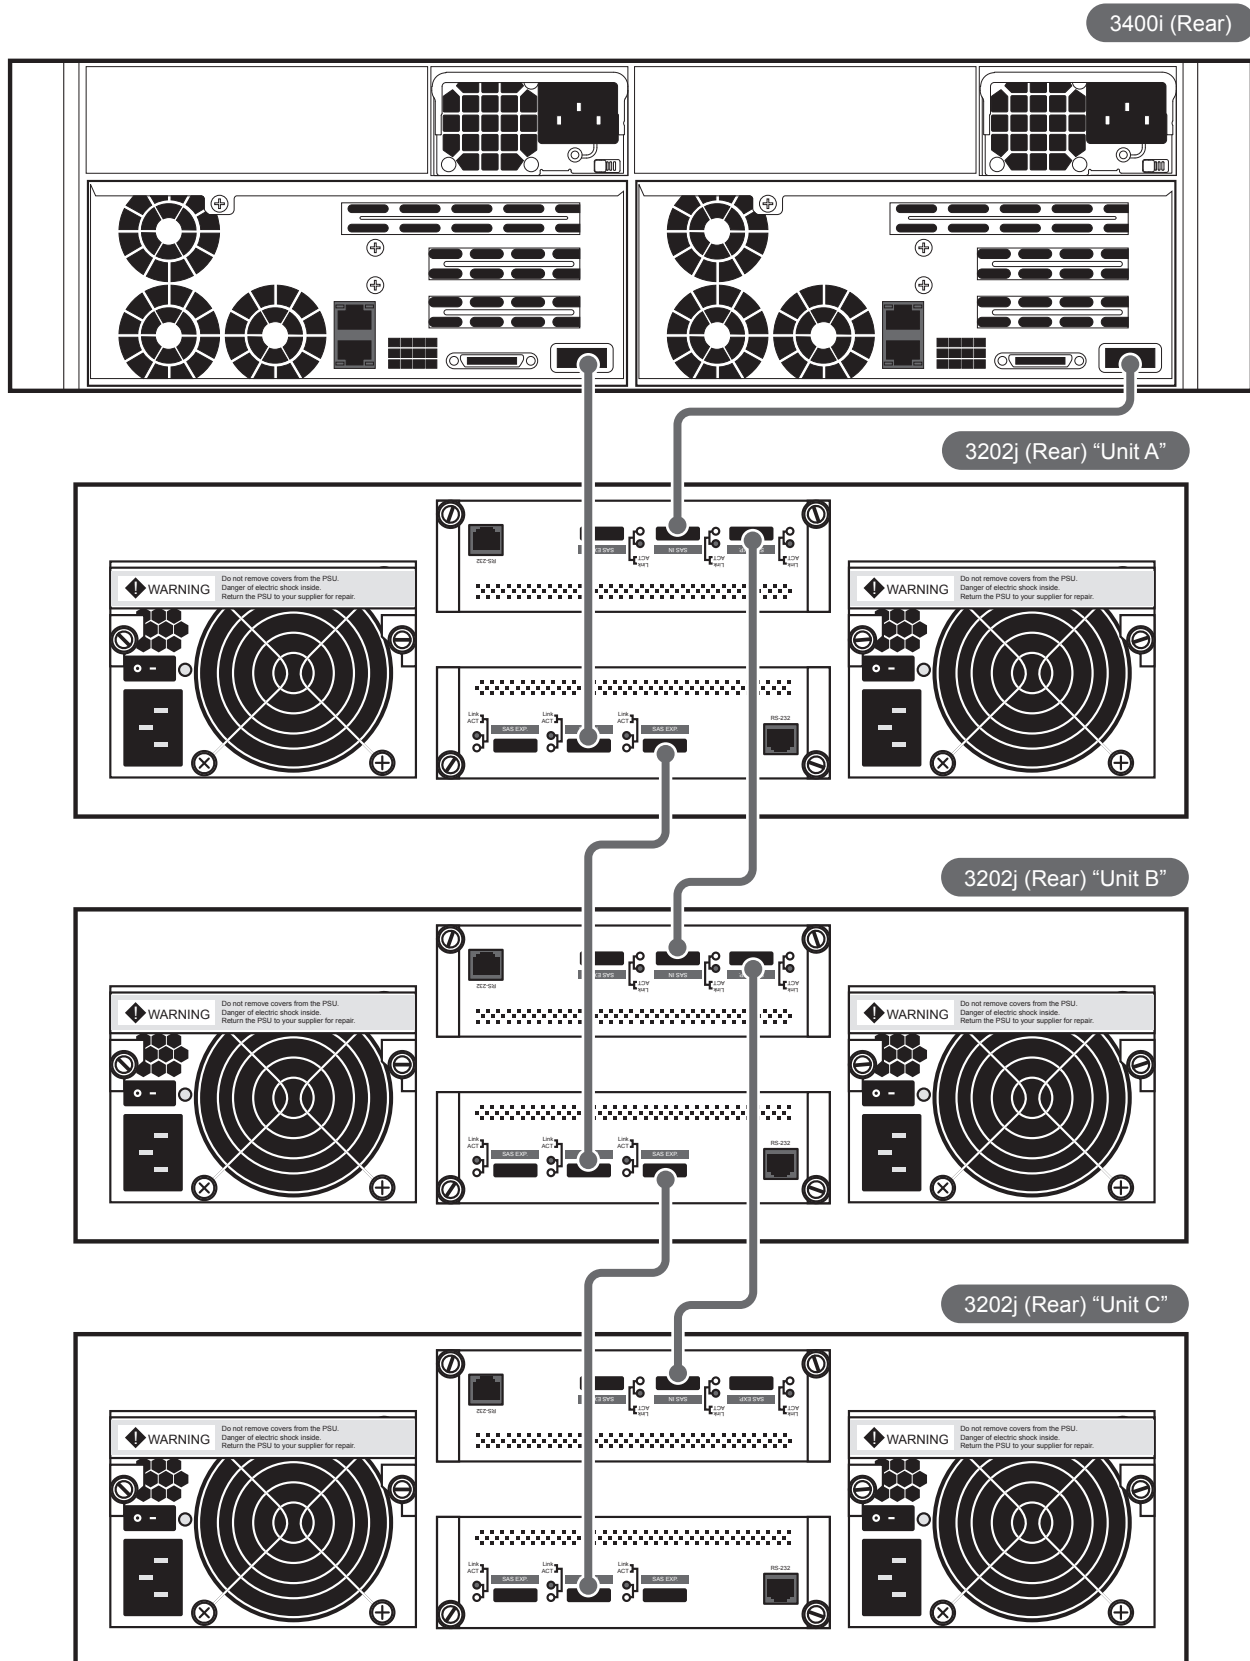


StorTrends® 3202j Overview

Installing The Expandable L Bracket Rails Into The Rack

FR (front, rear)

RR (right, rear)

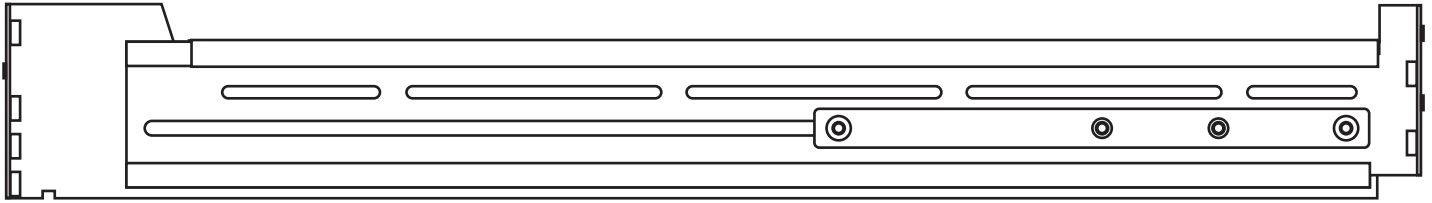

RR (right, rear)


FR (front, rear)



FL (front, left)


RL (rear, left)

Loosen the two screws in the middle of both rails to allow each rail to be adjusted. Tighten these screws after adjusting the rails to fit your rack.

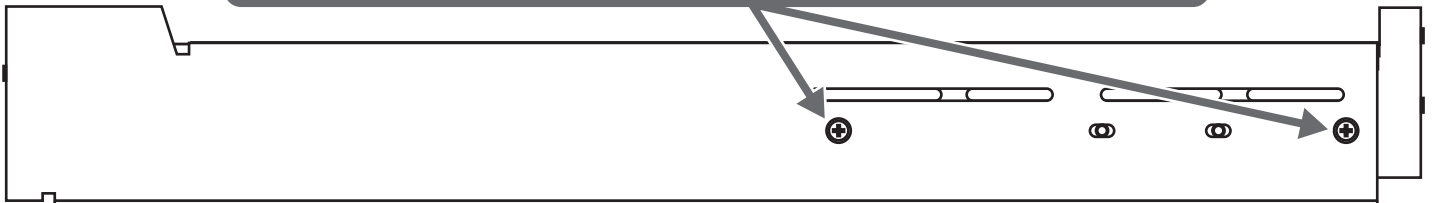

RL (rear, left)

FL (front, left)

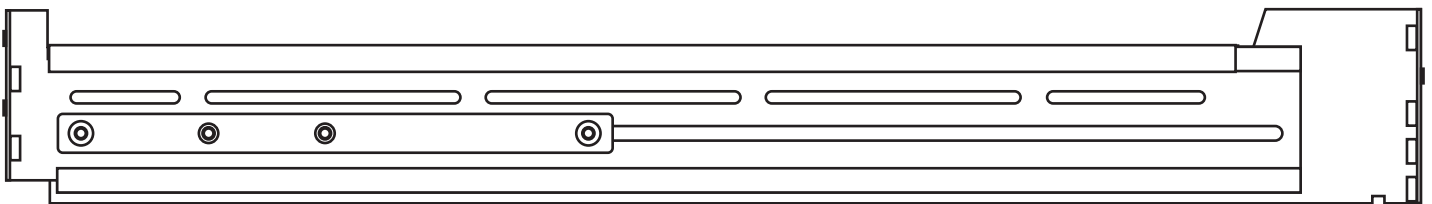

WARNING

Installation of the expandable L bracket rails should be performed by a trained technician. To install the expandable L bracket rails into your rack, complete the following steps:

- 1.) Loosen the two screws in the middle of both rails to allow each rail to be adjusted.
- 2.) Starting from the rear of the rack, extend the expandable L bracket rail until both ends touch the inside of the rack.
- 3.) Depending on whether you are installing the LEFT or RIGHT expandable L bracket rail, insert the side stamped/marked EITHER RL (REAR LEFT) or RR (REAR RIGHT) into the rear of the rack. Secure the rail to the rear of your rack with two screws.
- 4.) Insert the side stamped/marked EITHER FL (FRONT LEFT) or FR (FRONT RIGHT) into the front of the rack. Secure the rail to the front of your rack with two screws. Do not use a screw on the middle screw hole as this will be used to secure the StorTrends 3202j to the rack.
- 5.) Tighten the the two screws that you loosened when you originally expanded the rails.